

ASSEMBLING INSTRUCTION


WINDSHIELD

KNS6300-26

WWW.BARRACUDAMOTO.COM

LEGEND

- | | | |
|--|--|--|
| 1. ALLEN SCREW M5X30
VITE A BRUGOLA M5X30
TORNILLO ALLEN M5X30
INBUSSCHRAUBE M5X30
VIS ALLEN M5X30 | 4. ALLEN SCREW M5X16
VITE A BRUGOLA M5X16
TORNILLO ALLEN M5X16
INBUSSCHRAUBE M5X16
VIS ALLEN M5X16 | 7. WASHERS Ø5
RONDELLA Ø5
ARANDELAS Ø5
SCHEIBE Ø5
RONDELLE Ø5 |
| 2. SPECIFIC BRACKETS
STAFFE SPECIFICHE
SOPORTES ESPECÍFICOS
SPEZIELLE HALTERUNGEN
SUPPORTS SPÉCIFIQUES | 5. TEFLON WASHERS Ø5
RONDELLA TEFLON Ø5
ARANDELAS DE TEFLON Ø5
TEFLONSCHLEIBE Ø5
RONDELLE EN TÉFLON Ø5 | 8. SELF-LOCKING NUT Ø5
DADO AUTOBLOCCANTE Ø5
TUERCA AUTOBLOQUEANTES Ø5
SELBSTSICHERNDE MUTTER Ø5
ÉCROU AUTOBLOQUANT Ø5 |
| 3. SPACER TUBE H.10
DISTANZIALE H.10
DISTANCIADOR H.10
DISTANZROHR H.10
ESPACEUR H.10 | 6. RUBBER WASHERS
RONDELLA GOMMA
ARANDELAS DE CAUCHO
GUMMISCHEIBE
RONDELLE EN CAOUTCHOUC | 9. NEOPRENE 20X10
NEOPRENE 20X10
NEOPRENO 20X10
NEOPREN 20X10
NÉOPRÈNE 20X10 |

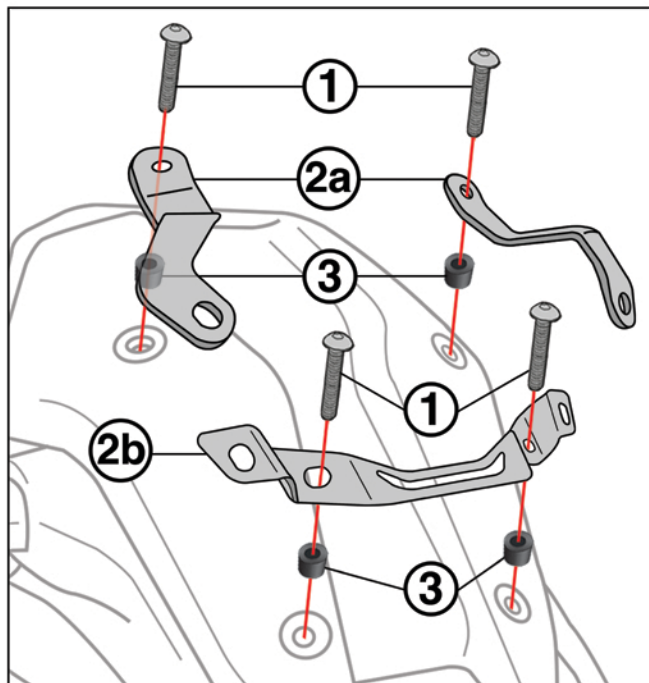

**REPEAT THE ASSEMBLY
PROCESS FOR BOTH SIDES**

