

MOUNTING PRECEDURE

KIT SAVE CARTER
KTM SUPERDUKE 1290

KTM1101


WWW.BARRACUDAMOTO.COM

FIXING PROCEDURE:

- FIND THE FIXING POINTS ON TGHE MOTORBIKE;
- USE THE THICKNESS AND BOLTS LIKE DESCRIBED IN THE IMAGE TO OBTAIN THE RIGHT PROJECTION OF CRASH PAD FROM THE MOTORBIKE;
- FIX THE PVC HEAD ONLY AFTER FIXED AND LOCKED ALL THE KIT.

KIT

- X2. PVC HEAD
- X2. CRASH PAD BASE
- X2. THICKNESS
- X2. BOLT 10X130

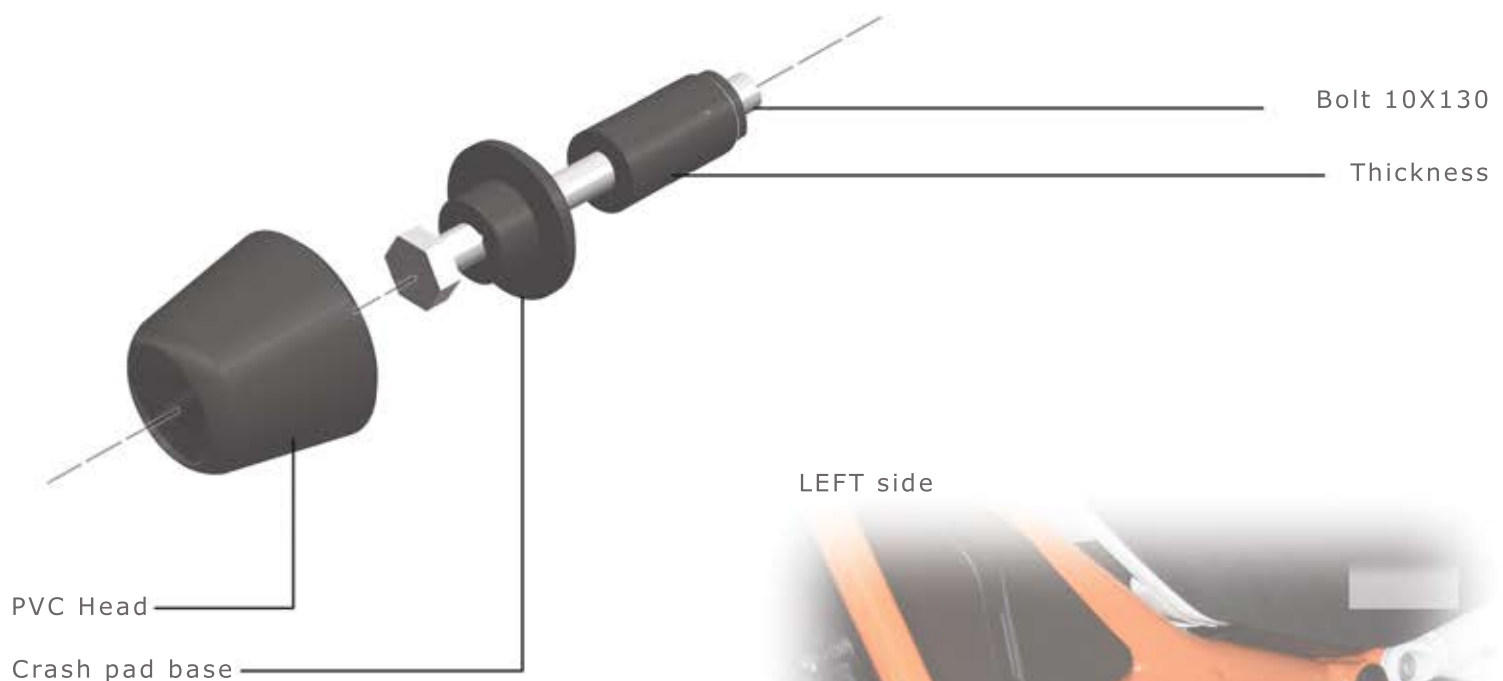

LEFT side

