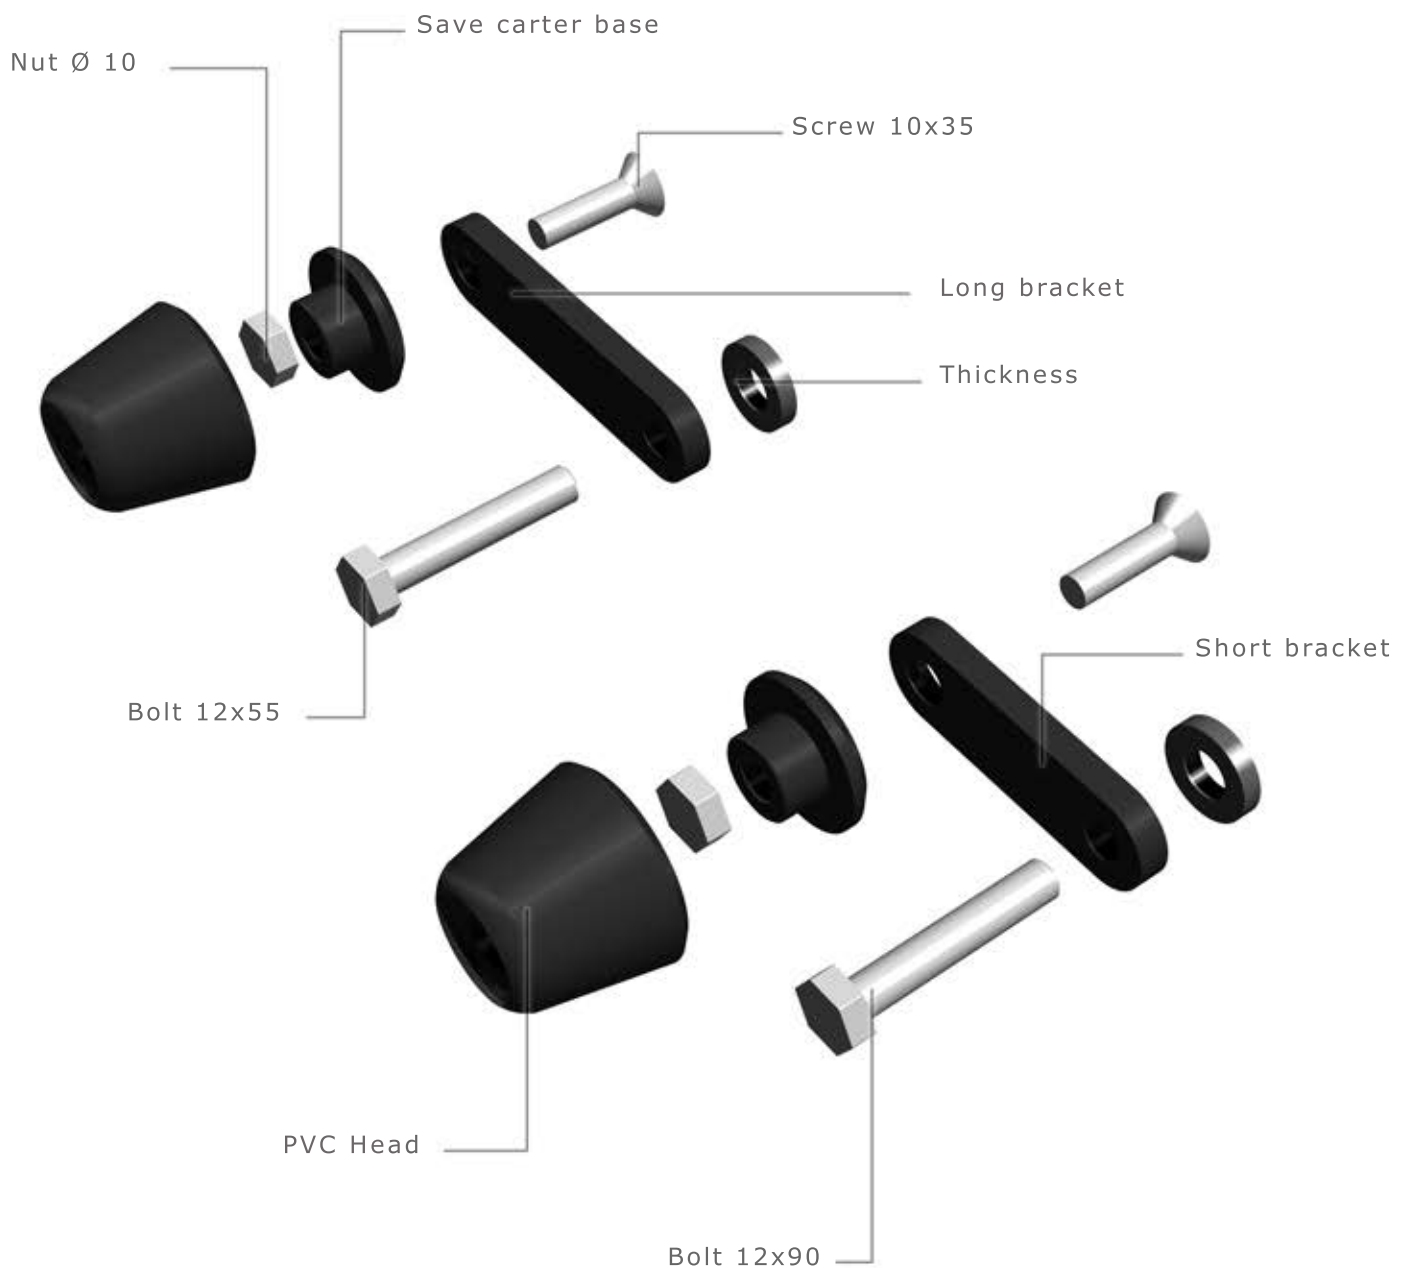


**MOUNTING PROCEDURE****KIT SAVE CARTER  
YAMAHA YZF-R1 '09 - '13****YP1101/09****KIT**

X2. PVC HEAD  
X2. SAVE CARTER BASE  
X1. LONG BRACKET  
X1. SHORT BRACKET  
X2. THICKNESS  
X2. SCREW 10X35  
X2. NUT DIAMETER 10  
X1. BOLT 12X90  
X1. BOLT 12X55

[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)

SEARCH AND FIND THE FIXING POINT ON THE MOTORBIKE BEFORE START TO MOUNTAIN, USE THE SPECIFIC THICKNESS AND BOLTS LIKE DESCRIBED IN THE PICTURE (SO YOU CAN GET THE RIGHT PROMINENCE FROM THE MOTORBIKE).

FIX THE PVC HEAD AFTER FIXED AND TIGHTEN ALL THE KIT ONLY